

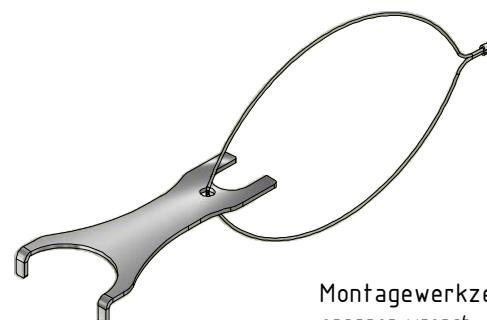


Technical drawing of the front view of the 3000 Series 1/2" valve. The drawing shows a horizontal valve body with a handle on the right. Dimensions are indicated in blue text and green lines:

- Overall length: 332 mm
- Distance from handle to main body: 44 mm
- Distance from handle to main body (inner): 12 mm
- Handle diameter: M65x2
- Main body diameter: Ø70 mm
- Valve body diameter: Ø82 mm
- Distance from handle to main body (inner): 19 mm
- Distance from main body to valve body: 36 mm
- Distance from valve body to handle: ca. 32 mm

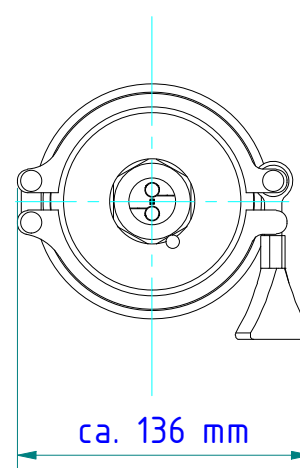

Ersteller: Neukötter	13.05.2020	Z-Index: 04
----------------------	------------	-------------

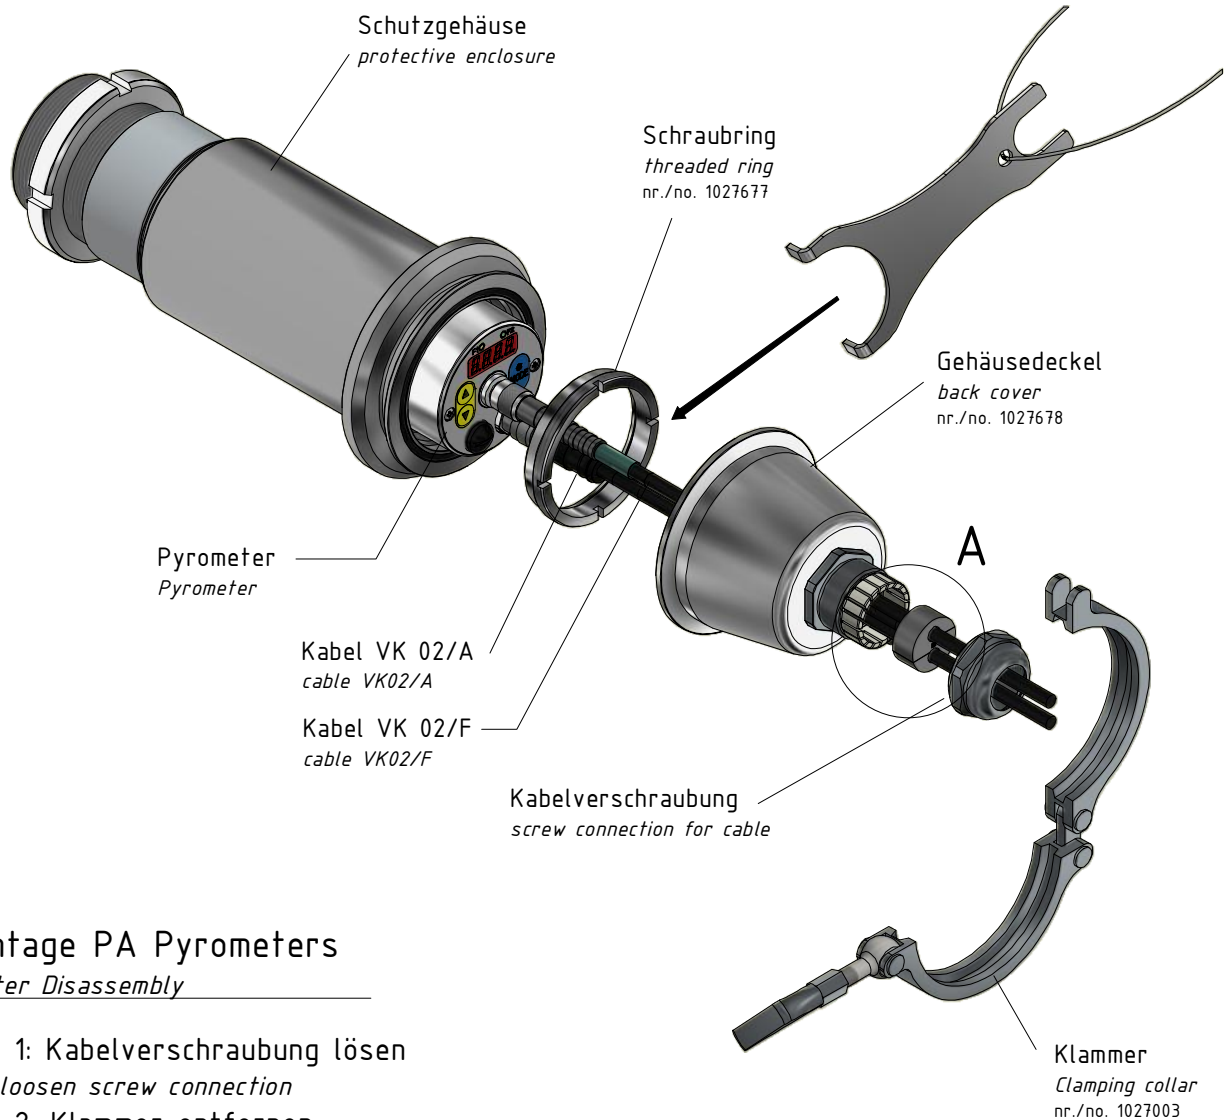

Demontage PA Pyrometers

Pyrometer Disassembly

Schritt 1: Kabelverschraubung lösen

Step 1: loosen screw connection

Schritt 2: Klammer entfernen

Step 2: to remove clamp collar

Schritt 3: Gehäusedeckel über das Kabel abziehen

Step 3: pull off the enclosure back cover

Schritt 4: Kabel VK 02/A und VK 02/F abschrauben



Step 4: remove the cable

Schritt 5: Schraubring mit Montagewerkzeug demontieren

Step 5: loosen the threaded ring; using tool



Schritt 6: Pyrometer entnehmen

Step 6: remove pyrometer

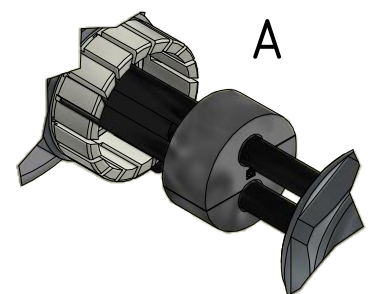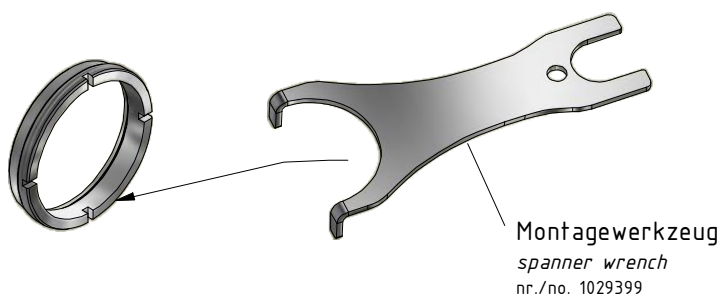

Bei der Verwendung eines PA-Pyrometers mit Kamera oder PA Pyrometer mit Rechteckblende, sollte der mitgelieferte O-Ring montiert werden. Dieser vermindert beim Klemmen des Pyrometers im Kühlgehäuse ein Verdrehen.

When using PA Pyrometer with camera or PA Pyrometer with rectangular aperture use the included O-Ring. It reduced a twist of the pyrometer in the cooling jacket.

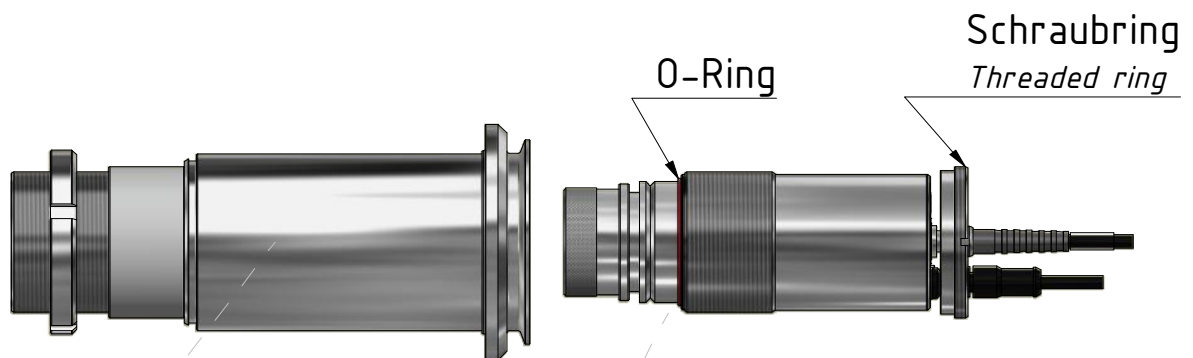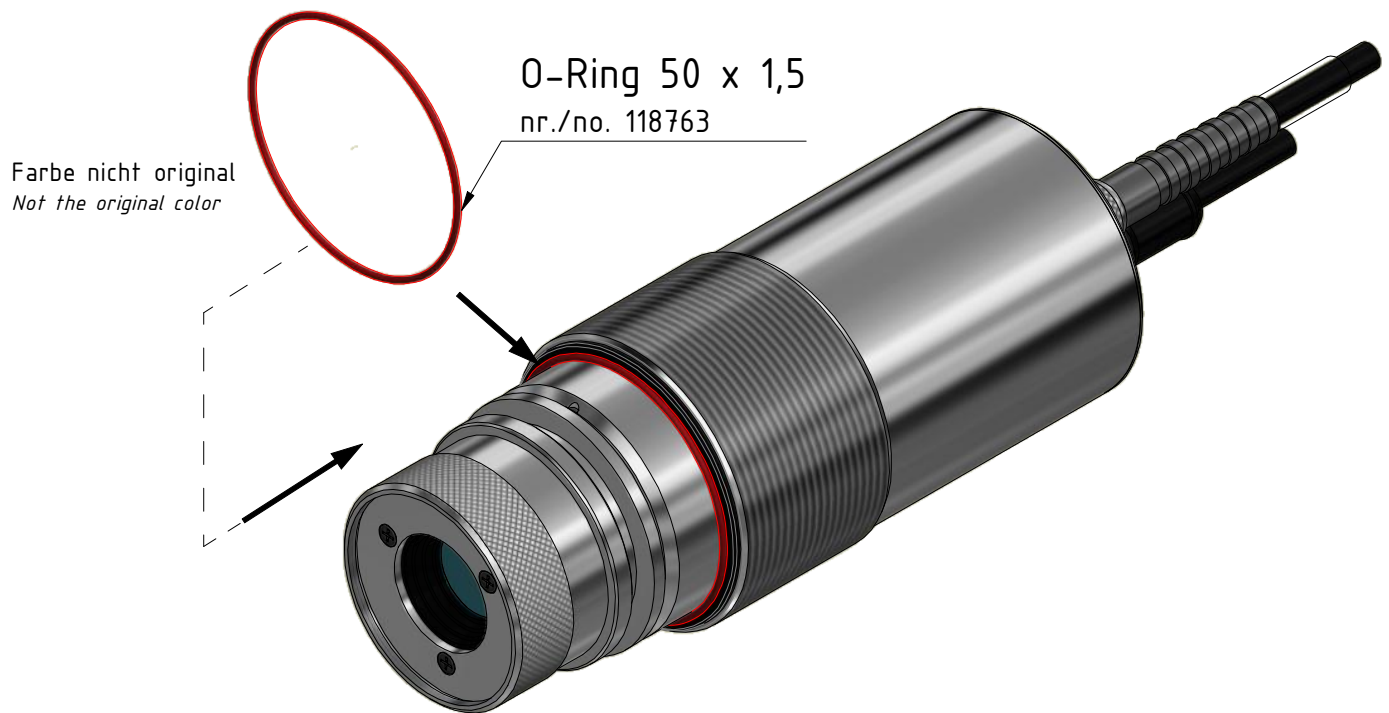



- Headquarters
- Sales and Service Center
- Sales abroad



Keller HCW GmbH
Infrared Temperature Solutions (ITS)
Carl-Keller-Straße 2-10
49479 Ibbenbüren-Laggenbeck
Germany

www.keller.de/its
Tel. +49 (0) 5451 850
Fax +49 (0) 5451 85412
its@keller.de

Distributor



INOR Transmitter Oy
Unikkotie 13
FI-01300 Vantaa
Puhelin +358 10 4217900
Faksi +358 10 4217901
myynti@inor.fi